

4 in 1 High Chair

Assembly Instructions

For models 5046



IMPORTANT: Please read instructions carefully. Keep these instructions for future reference

High chair #5046

Assembly Instructions


Before assembly study the diagrams and read the instructions thoroughly. Identify and check against the list below. If any parts are missing or appear to be faulty or damaged, please contact INFASECURE Service Department on (02) 4728 8090.

Parts List


1	1x	Chair Body
2	1x	Chair Back
3	1x	Five point safety belt
4	1x	Tray
5	1x	Tray Support
6	1x	Table / Footrest
7	4x	Short Steel Tube Legs (A & B)
8	4x	Long Steel Tube Legs (C)
9	4x	Rubber feet (for long legs only)

Type of steel tube legs

A	2x	Short legs - Spring clips at both ends
B	2x	Short legs - Spring clips on one end only
C	4x	Long legs - For table only

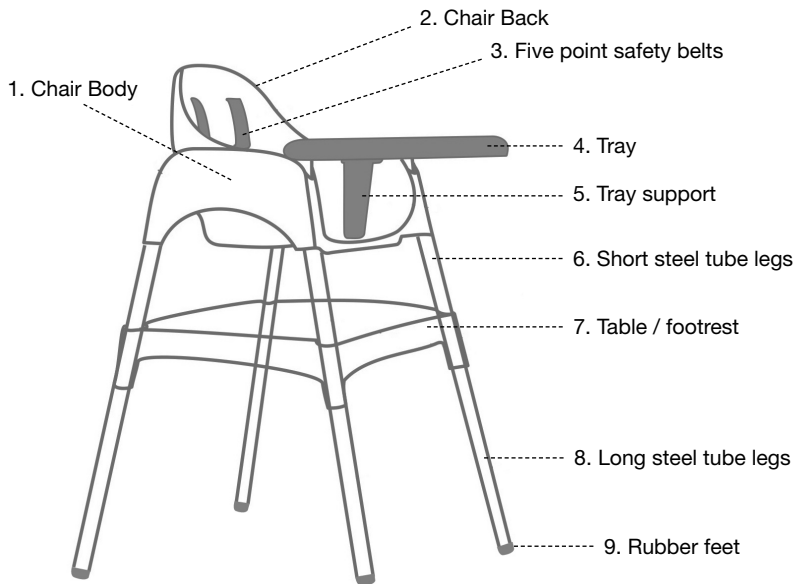

Type of steel tubes

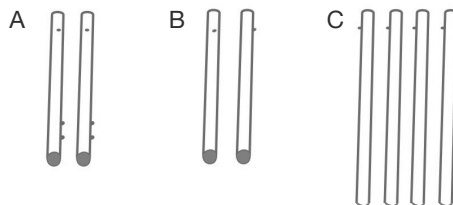

IMPORTANT: PLEASE READ INSTRUCTIONS CAREFULLY. KEEP FOR FUTURE REFERENCE.

WARNINGS

- **DO NOT LEAVE CHILDREN UNATTENDED.**
- **FOLLOW THE MANUFACTURER'S INSTRUCTIONS.**
- **THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED – MOST INJURIES FROM HIGH CHAIRS ARE CAUSED BY FALLS .**
- **POSITION THE HIGH CHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.**
- Never allow this product to be used as a toy.
- Do not use for children weighing more than 17kg (approximately 3 to 4 years old).
- Ensure the high chair is only used on safe level surfaces.
- When adjusting the chair always ensure that parts of your child's body are clear of any moving parts.
- Never carry or fold the high chair while the child is sitting in it.
- Do not elevate the highchair onto any structure or table.
- Check regularly for loose, worn, or torn parts and repair or replace as required with genuine INFA spare products.
- **DO NOT USE UNTIL REPAIRED.**
- Do not allow other children or animals to play near or walk under the chair when in use.
- To reduce the risk of injury, position the high chair away from furniture, walls, hot surfaces and liquids, window covering cords, and electrical cords and position the high chair away from furniture when the chair is not being used at a table with a tray removed.
- The high chair should only be used in an upright position once the child is capable of reliably and consistently sitting upright.
- Always apply wheel locks when not moving the high chair.
- Check that the harness is correctly fitted - use this harness at all times.
- Do not use the high chair unless all components are correctly fitted and adjusted.
- Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the high chair.
- Do not use the high chair until the child can sit up unaided.
- Do not use the high chair if any part is broken, torn or missing.

1. Fit chair back to chair body [Figure 1].

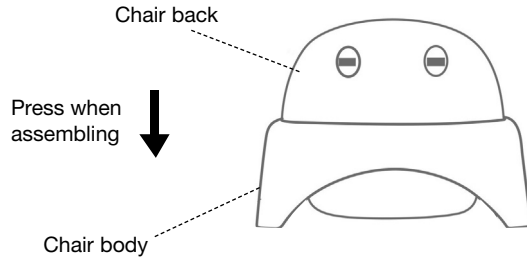


Figure 1

2. Insert short steel tube legs A into holes marked A on chair body. Repeat for remaining legs (B) [Figure 2].

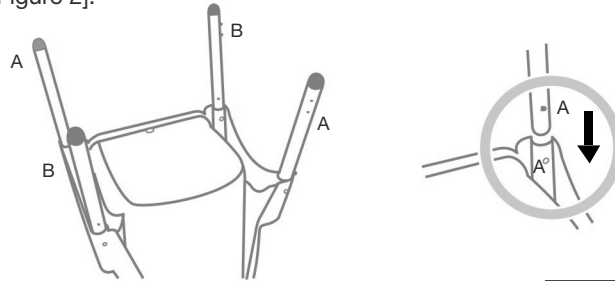


Figure 2

3. Insert the tray at an angle of 30-45 degrees. Push down until spring clip of the tray support sits in the correct position [Figure 3]. (Note: To remove tray, press clip and tilt tray upwards to release).

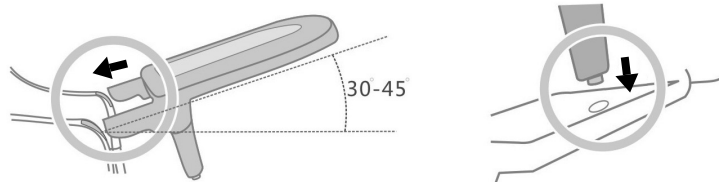


Figure 3

- Lift chair onto top of the table and align each of the 4 legs onto the corresponding holes in the table. Press spring on short tubes A, push into location hole on table [Figure 4]. Check that it has locked in position. Repeat for the opposite corners. (Note: To remove high chair off table, release the 2 spring clips and lift off.)

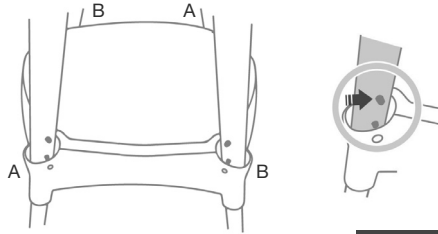


Figure 4

- Position cover onto seat body and align so that holes are in line with the harness slots [Figure 5].



Figure 5

- Insert each harness part into the aligning holes, push shoulder straps and clips through until the clip protrudes out the back slot of the seat. Pull on strap to check it is held in place. Repeat for waist straps and crotch strap [Figure 6].

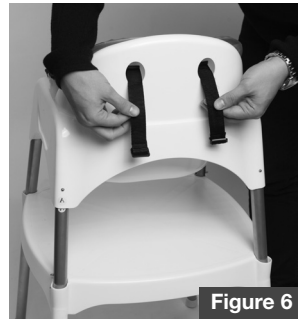


Figure 6

- Make sure harness is fully assembled. Check the buckle parts click together [Figure 7]. Also ensure that straps are not twisted.



Figure 7

Congratulations. You have completed the assembly instructions. Your highchair is now ready for use. Please read all the safety warnings on page 3 and store instructions in a safe place.

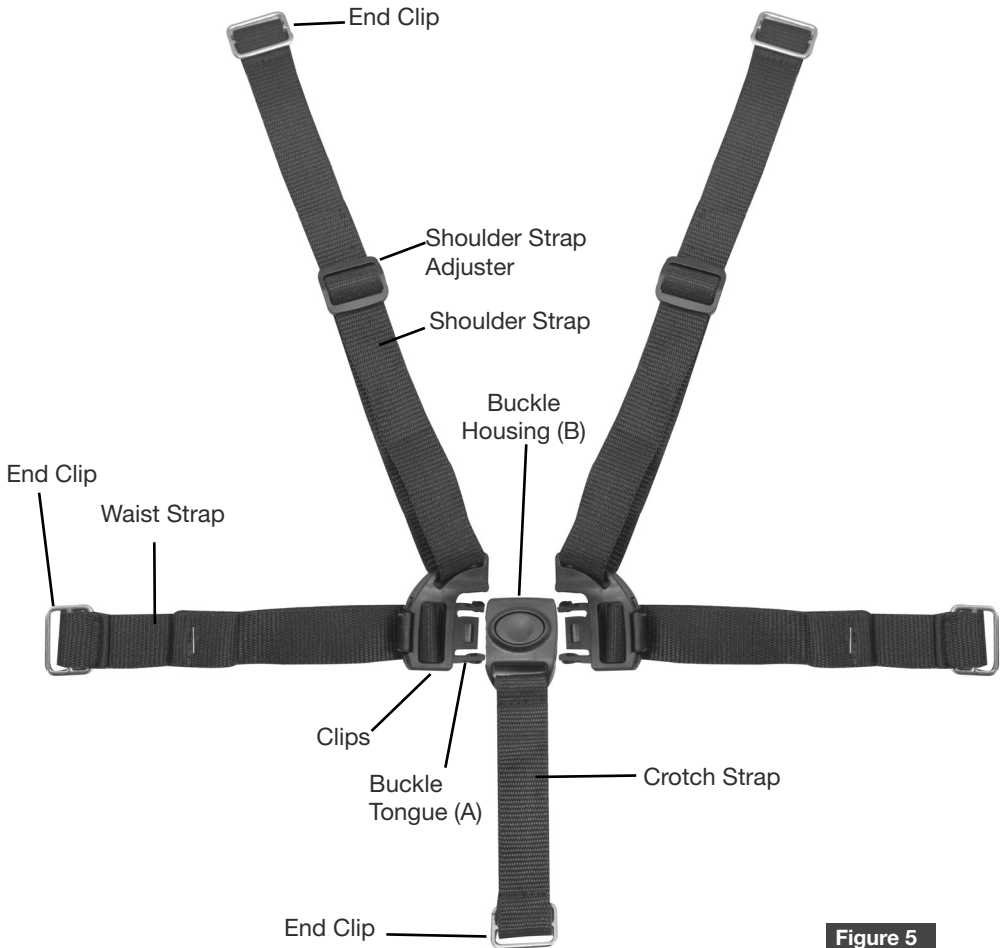


Figure 5


To secure your child in the harness push buckle tongues (A) into buckle housing (B) and adjust with waist strap adjuster so that the waist strap is firmly secured around child. Adjust crotch strap firmly using crotch strap adjuster. Place shoulder straps in position on buckle tongues (A) and adjust so that they are firm and comfortable on child.

CARE AND CLEANING

Only use warm soapy water for cleaning. Dry immediately after. Do not leave in direct sunlight for prolonged periods as fading may occur. Do not use abrasive cleaner or bleach. For further enquiries please contact the Infa Service Department on (02) 4728 8090.

TO USE FOR A SMALLER BABY

The optional #007 booster pad is available separately to add padding to the seat and reduce the seating area for the smaller child. This provides the child with extra security and comfort.

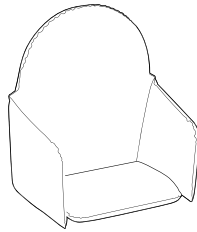

WARRANTY DETAILS

We warrant this product for twelve months from the date of purchase against failure due to manufacturing faults or faulty materials. Misuse, accidental damages, normal wear and tear are not covered by this warranty. When used for commercial use the period is limited to six months. "Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."



INFASECURE PTY LTD

Phone: 02 4728 8080

Fax: 02 4728 8040

Customer Service Phone: 02 4728 8090

ABN: 52 149 173 660

Head Office And Registered Address:

110-114 Old Bathurst Rd, Emu Plains, NSW, 2750

P.O Box 487, Emu Plains, NSW, 2750

www.infasecure.com.au

ISSUE A